


## Configuration of remote scale protocol with an indicator not from Dini Argeo

USER MANUAL

ENGLISH

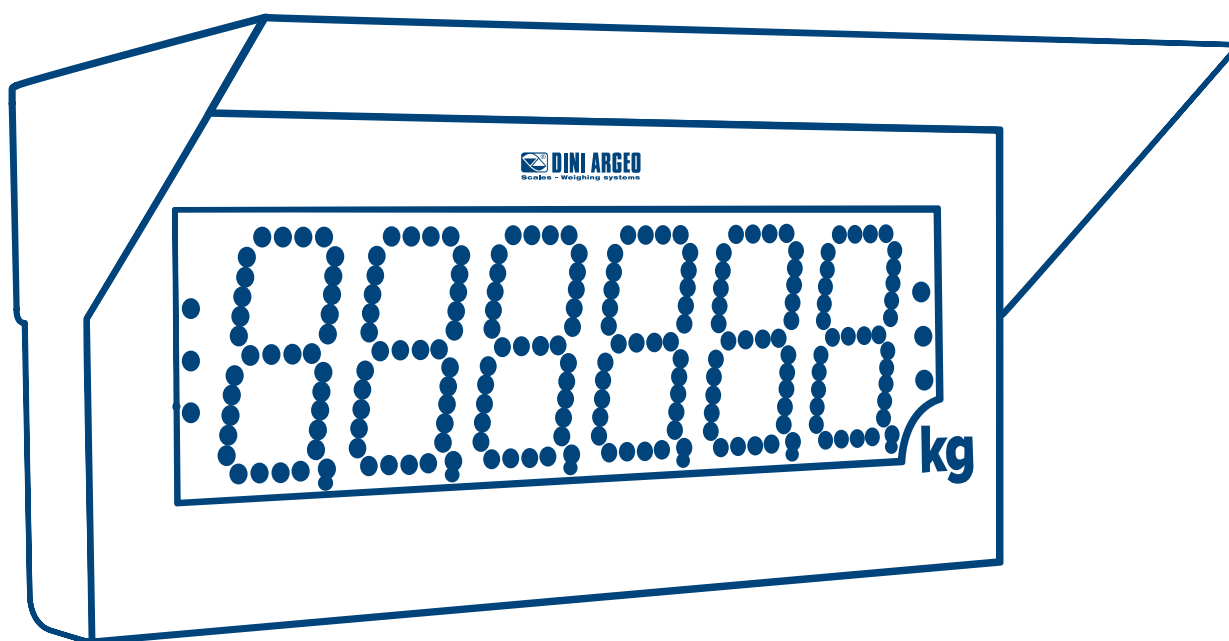



## Protocol

|                                                             |    |
|-------------------------------------------------------------|----|
| Introduction                                                | 4  |
| Bilanciai Protocol                                          | 5  |
| Bilanciai D410 - D800 Protocol                              | 6  |
| Bilanciai D410 Protocol                                     | 7  |
| Bilanciai DD700 Protocol                                    | 8  |
| Mettler Toledo IND310 - IND560 Protocol                     | 9  |
| Mettler Toledo IND780 Protocol                              | 10 |
| Precia Molen_A indicator Protocol + I400 indicator          | 11 |
| Precia Molen_A Indicator Protocol + I200 and I300 indicator | 12 |
| Precia Molen_ABC Protocol                                   | 14 |
| ADN pesage Protocol                                         | 15 |
| Arpege MasterK Protocol                                     | 16 |
| EXA CYBER Protocol                                          | 17 |
| GIROPES Protocol                                            | 18 |
| How to repeat the weight with a personalized string         | 19 |

## Introduction

This guide shows the parameters needed to configure on the DGT100/60R repeter in order to repeat the weight of not Dini Argeo indicators.

# Bilancial Protocol

## Bilancial indicator parameters

Function Mode = Cyclic ( Continuous Transmission)  
String = CB  
Baud Rate = 9600  
Word lenght = 8  
Parity Type = none  
Stop Bits = 1

## DGT100R/60R Repeter parameters

« PC SEL » and « COM PC » parameters:

| F.MODE                            | GENERAL SETUP | SERIAL     | PRINTER CONFIGURATION | OUTPUTS/INPUTS                      | SETPOINTS | ANALOG OUTPUT | Notes |
|-----------------------------------|---------------|------------|-----------------------|-------------------------------------|-----------|---------------|-------|
| <b>PC SEL</b>                     |               |            |                       | 9) EMULATION CTS CHARACTERS (NCHRS) |           | 100 ?         |       |
| 1) PC PORT                        |               | COM2/232 ? |                       | 10) EMULATION CTS TIME (ms) (TIME)  |           | 300 ?         |       |
| <b>COM PRN</b>                    |               |            |                       | <b>COM PC</b>                       |           |               |       |
| 2) PR.MODE                        |               | PR-NO ?    |                       | 11) PCMODE (MODE REPEATER)          |           | W.REPE ?      |       |
| 3) BAUD RATE (BAUD.PR)            |               | 9600 ?     |                       | 12) ADDRESS 485 (AD485)             |           | 1 ?           |       |
| 4) PARITY TYPE                    |               | NONE ?     |                       | 13) BAUD RATE (BAUD)                |           | 9600 ?        |       |
| 5) WORD LENGHT                    |               | 8 BIT ?    |                       | 14) PARITY TYPE                     |           | NONE ?        |       |
| 6) STOP BITS                      |               | 1 BIT ?    |                       | 15) WORD LENGHT                     |           | 8 BIT ?       |       |
| 7) PRINTER POWER SUPPLY (PWR.PRN) |               | PWR.EXT ?  |                       | 16) STOP BITS                       |           | 1 BIT ?       |       |
| 8) CTS STATUS (PRN.CTS)           |               | NO CTS ?   |                       |                                     |           |               |       |

« FUNCTIONING MODE » and « MODE REPEATER » parameters:

| F.MODE                                    | GENERAL SETUP | SERIAL        | PRINTER CONFIGURATION | OUTPUTS/INPUTS                           | SETPOINTS | ANALOG OUTPUT                      | Notes |
|-------------------------------------------|---------------|---------------|-----------------------|------------------------------------------|-----------|------------------------------------|-------|
| <b>FUNCTIONING MODE</b>                   |               |               |                       | 17) UNIT (UNIT)                          |           | 37) W.REPE UNDER LOAD VALUE        | 0 ?   |
| 1) FUNCT                                  |               | REPE ?        |                       | 18) DECIMALS (DECI)                      |           | 38) W.REPE OVER LOAD BITMASK       | 0 ?   |
| <b>GENERAL FUNCTION</b>                   |               |               |                       | 19) STABILITY READINGS (STAB)            |           | 39) W.REPE OVER LOAD BYTE POSITION | 10 ?  |
| 2) SCREEN SAVER (SCR.SAV)                 |               | 0 ?           |                       | 20) STABILITY INTERVAL (STA.INT)         |           | 40) W. REPE OVER LOAD VALUE        | 0 ?   |
| 3) AUTO SWITCH OFF (AUTOFF)               |               | 0 ?           |                       | 21) MIN. TRESHOLD                        |           | 41) ENABLE ADDRESS (ADD.EN)        | NO ?  |
| <b>MODE MASTER</b>                        |               |               |                       | 22) MAX. TRESHOLD                        |           | 42) COMMUNICATION TIMEOUT (T.OUT)  | 1.5 ? |
| 4) NUMBER OF SLAVES (NUMSL)               |               | 13 ?          |                       | 23) W.REPE NET WEIGHT BITMASK            |           |                                    |       |
| 5) LISTEN ONLY (LISTEN)                   |               | YES ?         |                       | 24) W.REPE NET WEIGHT BYTE POSITION      |           |                                    |       |
| 6) PRINT                                  |               | NO ?          |                       | 25) W.REPE NET WEIGHT VALUE              |           |                                    |       |
| 7) PROTOCOL (PROTOC)                      |               | EXTEND ?      |                       | 26) W.REPE NEGATIVE WEIGHT BITMASK       |           |                                    |       |
| 8) CONNECTED SLAVES (T.KEYB)              |               | KB.DGT ?      |                       | 27) W.REPE NEGATIVE WEIGHT BYTE POSITION |           |                                    |       |
| 9) NUMBER OF DECIMALS (SUM.DEC)           |               | 0 ?           |                       | 28) W.REPE NEGATIVE WEIGHT VALUE         |           |                                    |       |
| 10) UNIT OF MEASURE (SUM.UM)              |               | g ?           |                       | 29) W.REPE STABLE WEIGHT BITMASK         |           |                                    |       |
| 11) SLAVES SUM DIVISION (SUM.DIV)         |               | Not settled ? |                       | 30) W.REPE STABLE WEIGHT BYTE POSITION   |           |                                    |       |
| 12) SLAVES SUM CAPACITY (SUM.MAX)         |               | 0 ?           |                       | 31) W.REPE STABLE WEIGHT VALUE           |           |                                    |       |
| <b>MODE REPEATER</b>                      |               |               |                       | 32) W.REPE ZERO WEIGHT BITMASK           |           |                                    |       |
| 13) STRING TERMINATOR (TERM)              |               | 13 ?          |                       | 33) W.REPE ZERO WEIGHT BYTE POSITION     |           |                                    |       |
| 14) WEIGHT START POSITION (WEI.POS)       |               | 2 ?           |                       | 34) W.REPE ZERO WEIGHT VALUE             |           |                                    |       |
| 15) WEIGHT LENGHT IN THE STRING (WEI.LEN) |               | 5 ?           |                       | 35) W.REPE UNDER LOAD BITMASK            |           |                                    |       |
| 16) STRING LENGHT (STR.LEN)               |               | 7 ?           |                       | 36) W.REPE UNDER LOAD BYTE POSITION      |           |                                    |       |



Configure the parameters: UNIT, DECI, MIN.T and MAX.T like that on the indicator Bilanciali.

## CONNECTIONS

**DGT60**  
**RS232**

RX →  
TX →  
GND →

**DB9-M**

TX  
RX  
GND

**DGT60**  
**RS485**

A+ →  
B- →

**DB9-M**

A+  
B-



# Bilanciali D410 - D800 Protocol

## Bilanciali D410 - D800 string parameters

|               |   |                                   |
|---------------|---|-----------------------------------|
| Function Mode | = | Cyclic ( Continuous Transmission) |
| String        | = | CB                                |
| Baud Rate     | = | 9600                              |
| Word lenght   | = | 8                                 |
| Parity Type   | = | none                              |
| Stop Bits     | = | 1                                 |

## DGT100R/60R Repeter parameters

« PC SEL » and « COM PC » parameters:

| F.MODE                            | GENERAL SETUP | SERIAL   | PRINTER CONFIGURATION | OUTPUTS/INPUTS                      | SETPOINTS | ANALOG OUTPUT | Notes |
|-----------------------------------|---------------|----------|-----------------------|-------------------------------------|-----------|---------------|-------|
| <b>PC SEL</b>                     |               |          |                       | 9) EMULATION CTS CHARACTERS (NCHRS) |           | 100           | ?     |
| 1) PC PORT                        |               | COM2/232 | ?                     | 10) EMULATION CTS TIME (ms) (TIME)  |           | 300           | ?     |
| <b>COM PRN</b>                    |               |          |                       | <b>COM PC</b>                       |           |               |       |
| 2) PR.MODE                        |               | PR-NO    | ?                     | 11) PCMODE (MODE REPEATER)          |           | W.REPE        | ?     |
| 3) BAUD RATE (BAUD.PR)            |               | 9600     | ?                     | 12) ADDRESS 485 (AD485)             |           | 1             | ?     |
| 4) PARITY TYPE                    |               | NONE     | ?                     | 13) BAUD RATE (BAUD)                |           | 9600          | ?     |
| 5) WORD LENGHT                    |               | 8 BIT    | ?                     | 14) PARITY TYPE                     |           | NONE          | ?     |
| 6) STOP BITS                      |               | 1 BIT    | ?                     | 15) WORD LENGHT                     |           | 8 BIT         | ?     |
| 7) PRINTER POWER SUPPLY (PWR.PRN) |               | PWR.EXT  | ?                     | 16) STOP BITS                       |           | 1 BIT         | ?     |
| 8) CTS STATUS (PRN.CTS)           |               | NO CTS   | ?                     |                                     |           |               |       |

« FUNCTIONING MODE » and « MODE REPEATER » parameters:

| F.MODE                                    | GENERAL SETUP | SERIAL | PRINTER CONFIGURATION                    | OUTPUTS/INPUTS | SETPOINTS                          | ANALOG OUTPUT | Notes |
|-------------------------------------------|---------------|--------|------------------------------------------|----------------|------------------------------------|---------------|-------|
| FUNCTIONING MODE                          |               |        | 17) UNIT (UNIT)                          | kg             | 37) W.REPE UNDER LOAD VALUE        | 0             |       |
| 1) FUNCT                                  | REPE          |        | 18) DECIMALS (DECI)                      | 0              | 38) W.REPE OVER LOAD BITMASK       | 4             |       |
| GENERAL FUNCTION                          |               |        | 19) STABILITY READINGS (STAB)            | 0              | 39) W.REPE OVER LOAD BYTE POSITION | 25            |       |
| 2) SCREEN SAVER (SCR.SAV)                 | 0             |        | 20) STABILITY INTERVAL (STA.INT)         | 0              | 40) W. REPE OVER LOAD VALUE        | 4             |       |
| 3) AUTO SWITCH OFF (AUTOFF)               | 0             |        | 21) MIN. TRESHOLD                        | .99999         | 41) ENABLE ADDRESS (ADD.EN)        | NO            |       |
| MODE MASTER                               |               |        | 22) MAX. TRESHOLD                        | 999999         | 42) COMMUNICATION TIMEOUT (T.OUT)  | 1.5           |       |
| 4) NUMBER OF SLAVES (NUMSL)               | 10            |        | 23) W.REPE NET WEIGHT BITMASK            | 49             |                                    |               |       |
| 5) LISTEN ONLY (LISTEN)                   | NO            |        | 24) W.REPE NET WEIGHT BYTE POSITION      | 26             |                                    |               |       |
| 6) PRINT                                  | NO            |        | 25) W.REPE NET WEIGHT VALUE              | 49             |                                    |               |       |
| 7) PROTOCOL (PROTOC)                      | NORMAL        |        | 26) W.REPE NEGATIVE WEIGHT BITMASK       | 0              |                                    |               |       |
| 8) CONNECTED SLAVES (T.KEYB)              | KB.DGT        |        | 27) W.REPE NEGATIVE WEIGHT BYTE POSITION | 0              |                                    |               |       |
| 9) NUMBER OF DECIMALS (SUM.DEC)           | 0             |        | 28) W.REPE NEGATIVE WEIGHT VALUE         | 0              |                                    |               |       |
| 10) UNIT OF MEASURE (SUM.UM)              | g             |        | 29) W.REPE STABLE WEIGHT BITMASK         | 2              |                                    |               |       |
| 11) SLAVES SUM DIVISION (SUM.DIV)         | Not settet    |        | 30) W.REPE STABLE WEIGHT BYTE POSITION   | 25             |                                    |               |       |
| 12) SLAVES SUM CAPACITY (SUM.MAX)         | 0             |        | 31) W.REPE STABLE WEIGHT VALUE           | 2              |                                    |               |       |
| MODE REPEATER                             |               |        | 32) W.REPE ZERO WEIGHT BITMASK           | 0              |                                    |               |       |
| 13) STRING TERMINATOR (TERM)              | 10            |        | 33) W.REPE ZERO WEIGHT BYTE POSITION     | 0              |                                    |               |       |
| 14) WEIGHT START POSITION (WEI.POS)       | 1             |        | 34) W.REPE ZERO WEIGHT VALUE             | 0              |                                    |               |       |
| 15) WEIGHT LENGHT IN THE STRING (WEI.LEN) | 9             |        | 35) W.REPE UNDER LOAD BITMASK            | 0              |                                    |               |       |
| 16) STRING LENGHT (STR.LEN)               | 29            |        | 36) W.REPE UNDER LOAD BYTE POSITION      | 0              |                                    |               |       |



Configure the parameters: UNIT, DECI, MIN.T and MAX.T like that on the indicator Bilanciali D410 - D800

## CONNECTIONS

### DGT60 RS232

|     |   |     |
|-----|---|-----|
| RX  | → | TX  |
| TX  | → | RX  |
| GND | → | GND |

### D410-D800

### DGT60 RS485

|    |   |    |
|----|---|----|
| A+ | → | A+ |
| B- | → | B- |

### D410-D800



## Bilanciai D410 Protocol

### DGT100R/60R Parameters

« PC SEL » and « COM PC » parameters:

« FUNCTIONING MODE » and « MODE REPEATER » parameters:



Configure the parameters: UNIT, DECI, MIN.T and MAX.T like that on the indicator Bilanciai D410.

|                     |   |             |
|---------------------|---|-------------|
| <b>DGT60</b>        |   | <b>D410</b> |
| <b><u>RS485</u></b> |   |             |
| A+                  | → | A+          |
| B-                  | → | B-          |



## Bilanciai DD700 Protocol

### DGT100R/60R Parameters

« PC SEL » and « COM PC » parameters:

« FUNCTIONING MODE » and « MODE REPEATER » parameters:



Configure the parameters: UNIT, DECI, MIN.T and MAX.T like that on the indicator Bilanciai DD700.



8





### Mettler Toledo IND780 Parameters

### DGT100R/60R Parameters

« PC SEL » and « COM PC » parameters:

« FUNCTIONING MODE » and « MODE REPEATER » parameters

Configure the parameters: UNIT, DECI, MIN.T and MAX.T like that on the indicator Mettler Toledo IND780.





# Precia Molen\_A Indicator Protocol + I200 and I300 indicator

## Precia Molen parameters

Function Mode = Continuous string  
Baud Rate = 1200  
Word Lenght = 7  
Parity = e  
Fluss control = 1

Protocol Blocks:

- 4: Status
- 1: Gross Weight
- 2: Tare Weight
- 3: Net Weight
- 5: Capacity
- 99: Alibi DSD value

String: <01><02>040202<02>01040500.kg <02>02013500.kg <02>03027000.kg <02>0500<02>9900000031<0D><0A>

## DGT100R/60R parameters

« PC SEL » and « COM PC » parameters:

| F.MODE                            | GENERAL SETUP | SERIAL     | PRINTER CONFIGURATION | OUTPUTS/INPUTS                      | SETPOINTS | ANALOG OUTPUT | Notes |
|-----------------------------------|---------------|------------|-----------------------|-------------------------------------|-----------|---------------|-------|
| <b>PC SEL</b>                     |               |            |                       | 9) EMULATION CTS CHARACTERS (NCHRS) |           | 100 ?         |       |
| 1) PC PORT                        |               | COM2/232 ? |                       | 10) EMULATION CTS TIME (ms) (TIME)  |           | 300 ?         |       |
| <b>COM PRN</b>                    |               |            |                       | <b>COM PC</b>                       |           |               |       |
| 2) PR.MODE                        |               | PR-NO ?    |                       | 11) PCMODE (MODE REPEATER)          |           | W.REPE ?      |       |
| 3) BAUD RATE (BAUD.PR)            |               | 1200 ?     |                       | 12) ADDRESS 485 (AD485)             |           | 1 ?           |       |
| 4) PARITY TYPE                    |               | EVEN ?     |                       | 13) BAUD RATE (BAUD)                |           | 1200 ?        |       |
| 5) WORD LENGHT                    |               | 7 BIT ?    |                       | 14) PARITY TYPE                     |           | EVEN ?        |       |
| 6) STOP BITS                      |               | 1 BIT ?    |                       | 15) WORD LENGHT                     |           | 7 BIT ?       |       |
| 7) PRINTER POWER SUPPLY (PWR.PRN) |               | PWR.EXT ?  |                       | 16) STOP BITS                       |           | 1 BIT ?       |       |
| 8) CTS STATUS (PRN.CTS)           |               | NO CTS ?   |                       |                                     |           |               |       |

« FUNCTIONING MODE » and « MODE REPEATER » parameters:

| F.MODE                                    | GENERAL SETUP | SERIAL | PRINTER CONFIGURATION                    | OUTPUTS/INPUTS | SETPOINTS                          | ANALOG OUTPUT | Notes |
|-------------------------------------------|---------------|--------|------------------------------------------|----------------|------------------------------------|---------------|-------|
| <b>FUNCTIONING MODE</b>                   |               |        | 17) UNIT (UNIT)                          | kg             | 37) W.REPE UNDER LOAD VALUE        | 1             |       |
| 1) FUNCT                                  | REPE          |        | 18) DECIMALS (DECI)                      | 0              | 38) W.REPE OVER LOAD BITMASK       | 3             |       |
| <b>GENERAL FUNCTION</b>                   |               |        | 19) STABILITY READINGS (STAB)            | 0              | 39) W.REPE OVER LOAD BYTE POSITION | 6             |       |
| 2) SCREEN SAVER (SCR.SAV)                 | 0             |        | 20) STABILITY INTERVAL (STA.INT)         | 0              | 40) W. REPE OVER LOAD VALUE        | 2             |       |
| 3) AUTO SWITCH OFF (AUTOFF)               | 0             |        | 21) MIN. TRESHOLD                        | -99999         | 41) ENABLE ADDRESS (ADD.EN)        | NO            |       |
| <b>MODE MASTER</b>                        |               |        | 22) MAX. TRESHOLD                        | 999999         | 42) COMMUNICATION TIMEOUT (T.OUT)  | 1.5           |       |
| 4) NUMBER OF SLAVES (NUMSL)               | 10            |        | 23) W.REPE NET WEIGHT BITMASK            | 3              |                                    |               |       |
| 5) LISTEN ONLY (LISTEN)                   | NO            |        | 24) W.REPE NET WEIGHT BYTE POSITION      | 7              |                                    |               |       |
| 6) PRINT                                  | YES           |        | 25) W.REPE NET WEIGHT VALUE              | 2              |                                    |               |       |
| 7) PROTOCOL (PROTOK)                      | NORMAL        |        | 26) W.REPE NEGATIVE WEIGHT BITMASK       | 8              |                                    |               |       |
| 8) CONNECTED SLAVES (T.KEYB)              | KB.DFKR       |        | 27) W.REPE NEGATIVE WEIGHT BYTE POSITION | 4              |                                    |               |       |
| 9) NUMBER OF DECIMALS (SUM.DEC)           | 0             |        | 28) W.REPE NEGATIVE WEIGHT VALUE         | 8              |                                    |               |       |
| 10) UNIT OF MEASURE (SUM.UM)              | g             |        | 29) W.REPE STABLE WEIGHT BITMASK         | 2              |                                    |               |       |
| 11) SLAVES SUM DIVISION (SUM.DIV)         | Not setted    |        | 30) W.REPE STABLE WEIGHT BYTE POSITION   | 5              |                                    |               |       |
| 12) SLAVES SUM CAPACITY (SUM.MAX)         | 0             |        | 31) W.REPE STABLE WEIGHT VALUE           | 2              |                                    |               |       |
| <b>MODE REPEATER</b>                      |               |        | 32) W.REPE ZERO WEIGHT BITMASK           | 8              |                                    |               |       |
| 13) STRING TERMINATOR (TERM)              | 10            |        | 33) W.REPE ZERO WEIGHT BYTE POSITION     | 6              |                                    |               |       |
| 14) WEIGHT START POSITION (WEI.POS)       | 37            |        | 34) W.REPE ZERO WEIGHT VALUE             | 8              |                                    |               |       |
| 15) WEIGHT LENGHT IN THE STRING (WEI.LEN) | 7             |        | 35) W.REPE UNDER LOAD BITMASK            | 3              |                                    |               |       |
| 16) STRING LENGHT (STR.LEN)               | 63            |        | 36) W.REPE UNDER LOAD BYTE POSITION      | 6              |                                    |               |       |



Configure the parameters: UNIT, DECI, MIN.T and MAX.T like that on the indicator Precia Molen.

CONNECTIONS

**DGT60**  
**RS232**

RX → TX  
TX → RX  
GND → GND

**Precia Molen**

**DGT60**  
**RS485**

A+ → A+  
B- → B-

**Precia Molen**





# ADN pesage Protocol

## ADN pesage Parameters

Baud Rate = 9600  
Word Length = 8  
Parity = none  
Stop Bit = 1

## DGT100R/60R parameters

« PC SEL » and « COM PC » parameters »:

| F.MODE                            | GENERAL SETUP | SERIAL     | PRINTER CONFIGURATION | OUTPUTS/INPUTS                      | SETPOINTS | ANALOG OUTPUT | Notes |
|-----------------------------------|---------------|------------|-----------------------|-------------------------------------|-----------|---------------|-------|
| <b>PC SEL</b>                     |               |            |                       | 9) EMULATION CTS CHARACTERS (NCHRS) |           | 100 ?         |       |
| 1) PC PORT                        |               | COM2/232 ? |                       | 10) EMULATION CTS TIME (ms) (TIME)  |           | 300 ?         |       |
| <b>COM PRN</b>                    |               |            |                       | <b>COM PC</b>                       |           |               |       |
| 2) PR.MODE                        |               | PR-NO ?    |                       | 11) PCMODE (MODE REPEATER)          |           | W.REPE ?      |       |
| 3) BAUD RATE (BAUD.PR)            |               | 9600 ?     |                       | 12) ADDRESS 485 (AD485)             |           | 1 ?           |       |
| 4) PARITY TYPE                    |               | NONE ?     |                       | 13) BAUD RATE (BAUD)                |           | 9600 ?        |       |
| 5) WORD LENGHT                    |               | 8 BIT ?    |                       | 14) PARITY TYPE                     |           | EVEN ?        |       |
| 6) STOP BITS                      |               | 1 BIT ?    |                       | 15) WORD LENGHT                     |           | 8 BIT ?       |       |
| 7) PRINTER POWER SUPPLY (PWR.PRN) |               | PWR.EXT ?  |                       | 16) STOP BITS                       |           | 1 BIT ?       |       |
| 8) CTS STATUS (PRN.CTS)           |               | NO CTS ?   |                       |                                     |           |               |       |

FUNCTIONING MODE » and « MODE REPEATER » parameters:

| F.MODE                                  | GENERAL SETUP | SERIAL        | PRINTER CONFIGURATION                    | OUTPUTS/INPUTS                 | SETPOINTS                    | ANALOG OUTPUT                      | Notes |
|-----------------------------------------|---------------|---------------|------------------------------------------|--------------------------------|------------------------------|------------------------------------|-------|
| <b>FUNCTIONING MODE</b>                 |               |               |                                          | 17) UNIT (UNIT)                |                              | 37) W.REPE UNDER LOAD VALUE        | 0 ?   |
| 1) FUNCT                                |               | REPE ?        | 18) DECIMALS (DECI)                      | 0 ?                            | 38) W.REPE OVER LOAD BITMASK | 0 ?                                |       |
| <b>GENERAL FUNCTION</b>                 |               |               |                                          | 19) STABILITY READINGS (STAB)  |                              | 39) W.REPE OVER LOAD BYTE POSITION | 0 ?   |
| 2) SCREEN SAVER (SCR.SAV)               |               | 0 ?           | 20) STABILITY INTERVAL (STA.INT)         | 6 ?                            | 40) W. REPE OVER LOAD VALUE  | 0 ?                                |       |
| 3) AUTO SWITCH OFF (AUTOFF)             |               | 0 ?           | 21) MIN. TRESHOLD                        | .99999 ?                       | 41) ENABLE ADDRESS (ADD.EN)  | NO ?                               |       |
| <b>MODE MASTER</b>                      |               |               |                                          | 22) MAX. TRESHOLD              | 999999 ?                     | 42) COMMUNICATION TIMEOUT (T.OUT)  | 1.5 ? |
| 4) NUMBER OF SLAVES (NUMSL)             |               | 13 ?          | 23) W.REPE NET WEIGHT BITMASK            | 0 ?                            |                              |                                    |       |
| 5) LISTEN ONLY (LISTEN)                 |               | NO ?          | 24) W.REPE NET WEIGHT BYTE POSITION      | 0 ?                            |                              |                                    |       |
| 6) PRINT                                |               | NO ?          | 25) W.REPE NET WEIGHT VALUE              | 0 ?                            |                              |                                    |       |
| 7) PROTOCOL (PROTOC)                    |               | EXTEND ?      | 26) W.REPE NEGATIVE WEIGHT BITMASK       | 0 ?                            |                              |                                    |       |
| 8) CONNECTED SLAVES (T.KEYB)            |               | KB.DGT ?      | 27) W.REPE NEGATIVE WEIGHT BYTE POSITION | 0 ?                            |                              |                                    |       |
| 9) NUMBER OF DECIMALS (SUM.DEC)         |               | 0 ?           | 28) W.REPE NEGATIVE WEIGHT VALUE         | 0 ?                            |                              |                                    |       |
| 10) UNIT OF MEASURE (SUM.UM)            |               | g ?           | 29) W.REPE STABLE WEIGHT BITMASK         | 0 ?                            |                              |                                    |       |
| 11) SLAVES SUM DIVISION (SUM.DIV)       |               | Not settled ? | 30) W.REPE STABLE WEIGHT BYTE POSITION   | 0 ?                            |                              |                                    |       |
| 12) SLAVES SUM CAPACITY (SUM.MAX)       |               | 0 ?           | 31) W.REPE STABLE WEIGHT VALUE           | 0 ?                            |                              |                                    |       |
| <b>MODE REPEATER</b>                    |               |               |                                          | 32) W.REPE ZERO WEIGHT BITMASK |                              |                                    |       |
| 13) STRING TERMINATOR (TERM)            |               | 13 ?          | 33) W.REPE ZERO WEIGHT BYTE POSITION     | 0 ?                            |                              |                                    |       |
| 14) WEIGHT START POSITION (WEI.POS)     |               | 0 ?           | 34) W.REPE ZERO WEIGHT VALUE             | 0 ?                            |                              |                                    |       |
| 15) WEIGHT LENGHT IN THE STRING (WELEN) |               | 6 ?           | 35) W.REPE UNDER LOAD BITMASK            | 0 ?                            |                              |                                    |       |
| 16) STRING LENGHT (STRLEN)              |               | 6 ?           | 36) W.REPE UNDER LOAD BYTE POSITION      | 0 ?                            |                              |                                    |       |



Configure the parameters: UNIT, DECI, MIN.T and MAX.T like that on the indicator ADN.

## CONNECTIONS

**DGT60**  
**RS232**

RX → TX  
TX → RX  
GND → GND

**ADN**

**DGT60**  
**RS485**

A+ → A+  
B- → B-

**ADN**



# Arpege MasterK Protocol

## Arpege Masterk Protocol

Function Mode = Continuous string  
Baud = 1200  
n. = 8  
Parity = n  
Fluss control = 1

## DGT100R/60R parameters

« PC SEL » and « COM PC » parameters »:

| F.MODE                            | GENERAL SETUP | SERIAL     | PRINTER CONFIGURATION | OUTPUTS/INPUTS                      | SETPOINTS | ANALOG OUTPUT | Notes |
|-----------------------------------|---------------|------------|-----------------------|-------------------------------------|-----------|---------------|-------|
| <b>PC SEL</b>                     |               |            |                       | 9) EMULATION CTS CHARACTERS (NCHRS) |           | 100 ?         |       |
| 1) PC PORT                        |               | COM2/232 ? |                       | 10) EMULATION CTS TIME (ms) (TIME)  |           | 300 ?         |       |
| <b>COM PRN</b>                    |               |            |                       | <b>COM PC</b>                       |           |               |       |
| 2) PR.MODE                        |               | PR-NO ?    |                       | 11) PCMODE (MODE REPEATER)          |           | W.REPE ?      |       |
| 3) BAUD RATE (BAUD.PR)            |               | 9600 ?     |                       | 12) ADDRESS 485 (AD485)             |           | 1 ?           |       |
| 4) PARITY TYPE                    |               | EVEN ?     |                       | 13) BAUD RATE (BAUD)                |           | 1200 ?        |       |
| 5) WORD LENGHT                    |               | 7 BIT ?    |                       | 14) PARITY TYPE                     |           | NONE ?        |       |
| 6) STOP BITS                      |               | 1 BIT ?    |                       | 15) WORD LENGHT                     |           | 8 BIT ?       |       |
| 7) PRINTER POWER SUPPLY (PWR.PRN) |               | PWR.EXT ?  |                       | 16) STOP BITS                       |           | 1 BIT ?       |       |
| 8) CTS STATUS (PRN.CTS)           |               | NO CTS ?   |                       |                                     |           |               |       |

« FUNCTIONING MODE » and « MODE REPEATER » parameters:

| F.MODE                                    | GENERAL SETUP | SERIAL        | PRINTER CONFIGURATION                    | OUTPUTS/INPUTS                 | SETPOINTS                    | ANALOG OUTPUT                      | Notes |
|-------------------------------------------|---------------|---------------|------------------------------------------|--------------------------------|------------------------------|------------------------------------|-------|
| <b>FUNCTIONING MODE</b>                   |               |               |                                          | 17) UNIT (UNIT)                |                              | 37) W.REPE UNDER LOAD VALUE        | 0 ?   |
| 1) FUNCT                                  |               | REPE ?        | 18) DECIMALS (DECI)                      | 0 ?                            | 38) W.REPE OVER LOAD BITMASK | 0 ?                                |       |
| <b>GENERAL FUNCTION</b>                   |               |               |                                          | 19) STABILITY READINGS (STAB)  |                              | 39) W.REPE OVER LOAD BYTE POSITION | 0 ?   |
| 2) SCREEN SAVER (SCR.SAV)                 |               | 0 ?           | 20) STABILITY INTERVAL (STA.INT)         | 0 ?                            | 40) W. REPE OVER LOAD VALUE  | 0 ?                                |       |
| 3) AUTO SWITCH OFF (AUTOFF)               |               | 0 ?           | 21) MIN. TRESHOLD                        | -99999 ?                       | 41) ENABLE ADDRESS (ADD.EN)  | NO ?                               |       |
| <b>MODE MASTER</b>                        |               |               |                                          | 22) MAX. TRESHOLD              | 999999 ?                     | 42) COMMUNICATION TIMEOUT (T.OUT)  | 1.5 ? |
| 4) NUMBER OF SLAVES (NUMSL)               |               | 0 ?           | 23) W.REPE NET WEIGHT BITMASK            | 0 ?                            |                              |                                    |       |
| 5) LISTEN ONLY (LISTEN)                   |               | NO ?          | 24) W.REPE NET WEIGHT BYTE POSITION      | 0 ?                            |                              |                                    |       |
| 6) PRINT                                  |               | NO ?          | 25) W.REPE NET WEIGHT VALUE              | 0 ?                            |                              |                                    |       |
| 7) PROTOCOL (PROTOK)                      |               | NORMAL ?      | 26) W.REPE NEGATIVE WEIGHT BITMASK       | 45 ?                           |                              |                                    |       |
| 8) CONNECTED SLAVES (T.KEYB)              |               | KB.DGT ?      | 27) W.REPE NEGATIVE WEIGHT BYTE POSITION | 8 ?                            |                              |                                    |       |
| 9) NUMBER OF DECIMALS (SUM.DEC)           |               | 0 ?           | 28) W.REPE NEGATIVE WEIGHT VALUE         | 45 ?                           |                              |                                    |       |
| 10) UNIT OF MEASURE (SUM.UM)              |               | g ?           | 29) W.REPE STABLE WEIGHT BITMASK         | 0 ?                            |                              |                                    |       |
| 11) SLAVES SUM DIVISION (SUM.DIV)         |               | Not settled ? | 30) W.REPE STABLE WEIGHT BYTE POSITION   | 0 ?                            |                              |                                    |       |
| 12) SLAVES SUM CAPACITY (SUM.MAX)         |               | 0 ?           | 31) W.REPE STABLE WEIGHT VALUE           | 0 ?                            |                              |                                    |       |
| <b>MODE REPEATER</b>                      |               |               |                                          | 32) W.REPE ZERO WEIGHT BITMASK | 0 ?                          |                                    |       |
| 13) STRING TERMINATOR (TERM)              |               | 22 ?          | 33) W.REPE ZERO WEIGHT BYTE POSITION     | 0 ?                            |                              |                                    |       |
| 14) WEIGHT START POSITION (WEI.POS)       |               | 1 ?           | 34) W.REPE ZERO WEIGHT VALUE             | 0 ?                            |                              |                                    |       |
| 15) WEIGHT LENGHT IN THE STRING (WEI.LEN) |               | 6 ?           | 35) W.REPE UNDER LOAD BITMASK            | 0 ?                            |                              |                                    |       |
| 16) STRING LENGHT (STR.LEN)               |               | 9 ?           | 36) W.REPE UNDER LOAD BYTE POSITION      | 0 ?                            |                              |                                    |       |



Configure the parameters: UNIT, DECI, MIN.T and MAX.T like that on the indicator Arpege MasterK ,if the weight have a decimal, modify the parameter WEI.LEN=7, STR.LEN=11.

## CONNECTIONS

### DGT60 RS232

RX → TX  
TX → RX  
GND → GND

### ARPEGE MASTERK

### DGT60 RS485

A+ → A+  
B- → B-

### ARPEGE MASTERK







# GIROPES Protocol

## GIROPES Parameters

Baud Rate = 9600  
Word length = 8  
Parity Type = none  
Stop Bits = 1

## DGT100R/60R parameters

« PC SEL » and « COM PC » parameters »:

| F.MODE                            | GENERAL SETUP | SERIAL     | PRINTER CONFIGURATION | OUTPUTS/INPUTS                      | SETPOINTS | ANALOG OUTPUT | Notes |
|-----------------------------------|---------------|------------|-----------------------|-------------------------------------|-----------|---------------|-------|
| <b>PC SEL</b>                     |               |            |                       | 9) EMULATION CTS CHARACTERS (NCHRS) |           | 100 ?         |       |
| 1) PC PORT                        |               | COM2/232 ? |                       | 10) EMULATION CTS TIME (ms) (TIME)  |           | 300 ?         |       |
| <b>COM PRN</b>                    |               |            |                       | <b>COM PC</b>                       |           |               |       |
| 2) PR.MODE                        |               | PR-NO ?    |                       | 11) PCMODE (MODE REPEATER)          |           | W.REPE ?      |       |
| 3) BAUD RATE (BAUD.PR)            |               | 9600 ?     |                       | 12) ADDRESS 485 (AD485)             |           | 1 ?           |       |
| 4) PARITY TYPE                    |               | NONE ?     |                       | 13) BAUD RATE (BAUD)                |           | 9600 ?        |       |
| 5) WORD LENGHT                    |               | 8 BIT ?    |                       | 14) PARITY TYPE                     |           | NONE ?        |       |
| 6) STOP BITS                      |               | 1 BIT ?    |                       | 15) WORD LENGHT                     |           | 8 BIT ?       |       |
| 7) PRINTER POWER SUPPLY (PWR.PRN) |               | PWR.EXT ?  |                       | 16) STOP BITS                       |           | 1 BIT ?       |       |
| 8) CTS STATUS (PRN.CTS)           |               | NO CTS ?   |                       |                                     |           |               |       |

« FUNCTIONING MODE » and « MODE REPEATER » parameters:

| F.MODE                                  | GENERAL SETUP | SERIAL        | PRINTER CONFIGURATION                    | OUTPUTS/INPUTS                 | SETPOINTS                    | ANALOG OUTPUT                      | Notes |
|-----------------------------------------|---------------|---------------|------------------------------------------|--------------------------------|------------------------------|------------------------------------|-------|
| <b>FUNCTIONING MODE</b>                 |               |               |                                          | 17) UNIT (UNIT)                |                              | 37) W.REPE UNDER LOAD VALUE        | 0 ?   |
| 1) FUNCT                                |               | REPE ?        | 18) DECIMALS (DECI)                      | 0 ?                            | 38) W.REPE OVER LOAD BITMASK | 4 ?                                |       |
| <b>GENERAL FUNCTION</b>                 |               |               |                                          | 19) STABILITY READINGS (STAB)  |                              | 39) W.REPE OVER LOAD BYTE POSITION | 25 ?  |
| 2) SCREEN SAVER (SCR.SAV)               |               | 0 ?           | 20) STABILITY INTERVAL (STA.INT)         | 0 ?                            | 40) W. REPE OVER LOAD VALUE  | 4 ?                                |       |
| 3) AUTO SWITCH OFF (AUTOFF)             |               | 0 ?           | 21) MIN. TRESHOLD                        | -99999 ?                       | 41) ENABLE ADDRESS (ADD.EN)  | NO ?                               |       |
| <b>MODE MASTER</b>                      |               |               |                                          | 22) MAX. TRESHOLD              | 999999 ?                     | 42) COMMUNICATION TIMEOUT (T.OUT)  | 1.5 ? |
| 4) NUMBER OF SLAVES (NUMSL)             |               | 10 ?          | 23) W.REPE NET WEIGHT BITMASK            | 255 ?                          |                              |                                    |       |
| 5) LISTEN ONLY (LISTEN)                 |               | NO ?          | 24) W.REPE NET WEIGHT BYTE POSITION      | 18 ?                           |                              |                                    |       |
| 6) PRINT                                |               | NO ?          | 25) W.REPE NET WEIGHT VALUE              | 52 ?                           |                              |                                    |       |
| 7) PROTOCOL (PROTOK)                    |               | NORMAL ?      | 26) W.REPE NEGATIVE WEIGHT BITMASK       | 255 ?                          |                              |                                    |       |
| 8) CONNECTED SLAVES (T.KEYB)            |               | KB.DGT ?      | 27) W.REPE NEGATIVE WEIGHT BYTE POSITION | 19 ?                           |                              |                                    |       |
| 9) NUMBER OF DECIMALS (SUM.DEC)         |               | 0 ?           | 28) W.REPE NEGATIVE WEIGHT VALUE         | 62 ?                           |                              |                                    |       |
| 10) UNIT OF MEASURE (SUM.UM)            |               | g ?           | 29) W.REPE STABLE WEIGHT BITMASK         | 255 ?                          |                              |                                    |       |
| 11) SLAVES SUM DIVISION (SUM.DIV)       |               | Not settled ? | 30) W.REPE STABLE WEIGHT BYTE POSITION   | 17 ?                           |                              |                                    |       |
| 12) SLAVES SUM CAPACITY (SUM.MAX)       |               | 0 ?           | 31) W.REPE STABLE WEIGHT VALUE           | 056 ?                          |                              |                                    |       |
| <b>MODE REPEATER</b>                    |               |               |                                          | 32) W.REPE ZERO WEIGHT BITMASK | 0 ?                          |                                    |       |
| 13) STRING TERMINATOR (TERM)            |               | 13 ?          | 33) W.REPE ZERO WEIGHT BYTE POSITION     | 0 ?                            |                              |                                    |       |
| 14) WEIGHT START POSITION (WEI.POS)     |               | 1 ?           | 34) W.REPE ZERO WEIGHT VALUE             | 0 ?                            |                              |                                    |       |
| 15) WEIGHT LENGHT IN THE STRING (WELEN) |               | 06 ?          | 35) W.REPE UNDER LOAD BITMASK            | 0 ?                            |                              |                                    |       |
| 16) STRING LENGHT (STRLEN)              |               | 21 ?          | 36) W.REPE UNDER LOAD BYTE POSITION      | 0 ?                            |                              |                                    |       |



Configure the parameters: UNIT, DECI, MIN.T and MAX.T like that on the indicator GIROPES.

## CONNECTIONS

### DGT60 RS232

RX → TX  
TX → RX  
GND → GND

### GIROPES

### DGT60 RS485

A+ → A+  
B- → B-

### GIROPES



If the indicator does not appear in the configuration list described in this manual, the module where you can define parameters to be configured on the DGT100R repeater is shown below.

In the tabel here is possible to see a string separated char by char:

### Gross Weight

### Type of tare

### Tare Weight

**Terminator** (Is raccomand to define the terminator as unuque. Must be the last character of the string)

### Parameter Table:

*i* The length of the string is 49 ( from 0 to 48 ) but the `Str.Len` is only 48 because the terminator don't count in the total length.

## PERSONALIZED STRING CONFIGURATION

| Parametr              | LCD Text                               | Data |
|-----------------------|----------------------------------------|------|
| <code>REn</code>      | REMOTE SCALE TERMINATOR                |      |
| <code>WE .Pos</code>  | REMOTE SCALE WEIGHT POSITION           |      |
| <code>WE .Len</code>  | WEIGHT STRING LENGHT                   |      |
| <code>TAr .Pos</code> | TARE POSITION                          |      |
| <code>TAr .Len</code> | REMOTE SCALE STRING LENGHT             |      |
| <code>TAr .tYP</code> | REMOTE SCALE TARE TYPE                 |      |
| <code>Str .Len</code> | REMOTE SCALE COMPLESSIVE STRING LENGHT |      |





Authorised service centre stamp

**HEAD OFFICE**

Via Della Fisica, 20  
41042 Spezzano di Fiorano, Modena - Italy  
Tel. +39.0536 843418 - Fax +390536 843521

**SERVICE ASSISTANCE**

Via Dell'Elettronica, 15  
41042 Spezzano di Fiorano, Modena - Italy  
Tel. +39.0536 921784 - Fax +390536 926654

[www.diniargeo.com](http://www.diniargeo.com)